




# Gateway KAV60 LT2016U WiFi Card Replacement

This guide will explain and show the steps to replace the Wi-Fi card for this gateway device

Written By: Brian

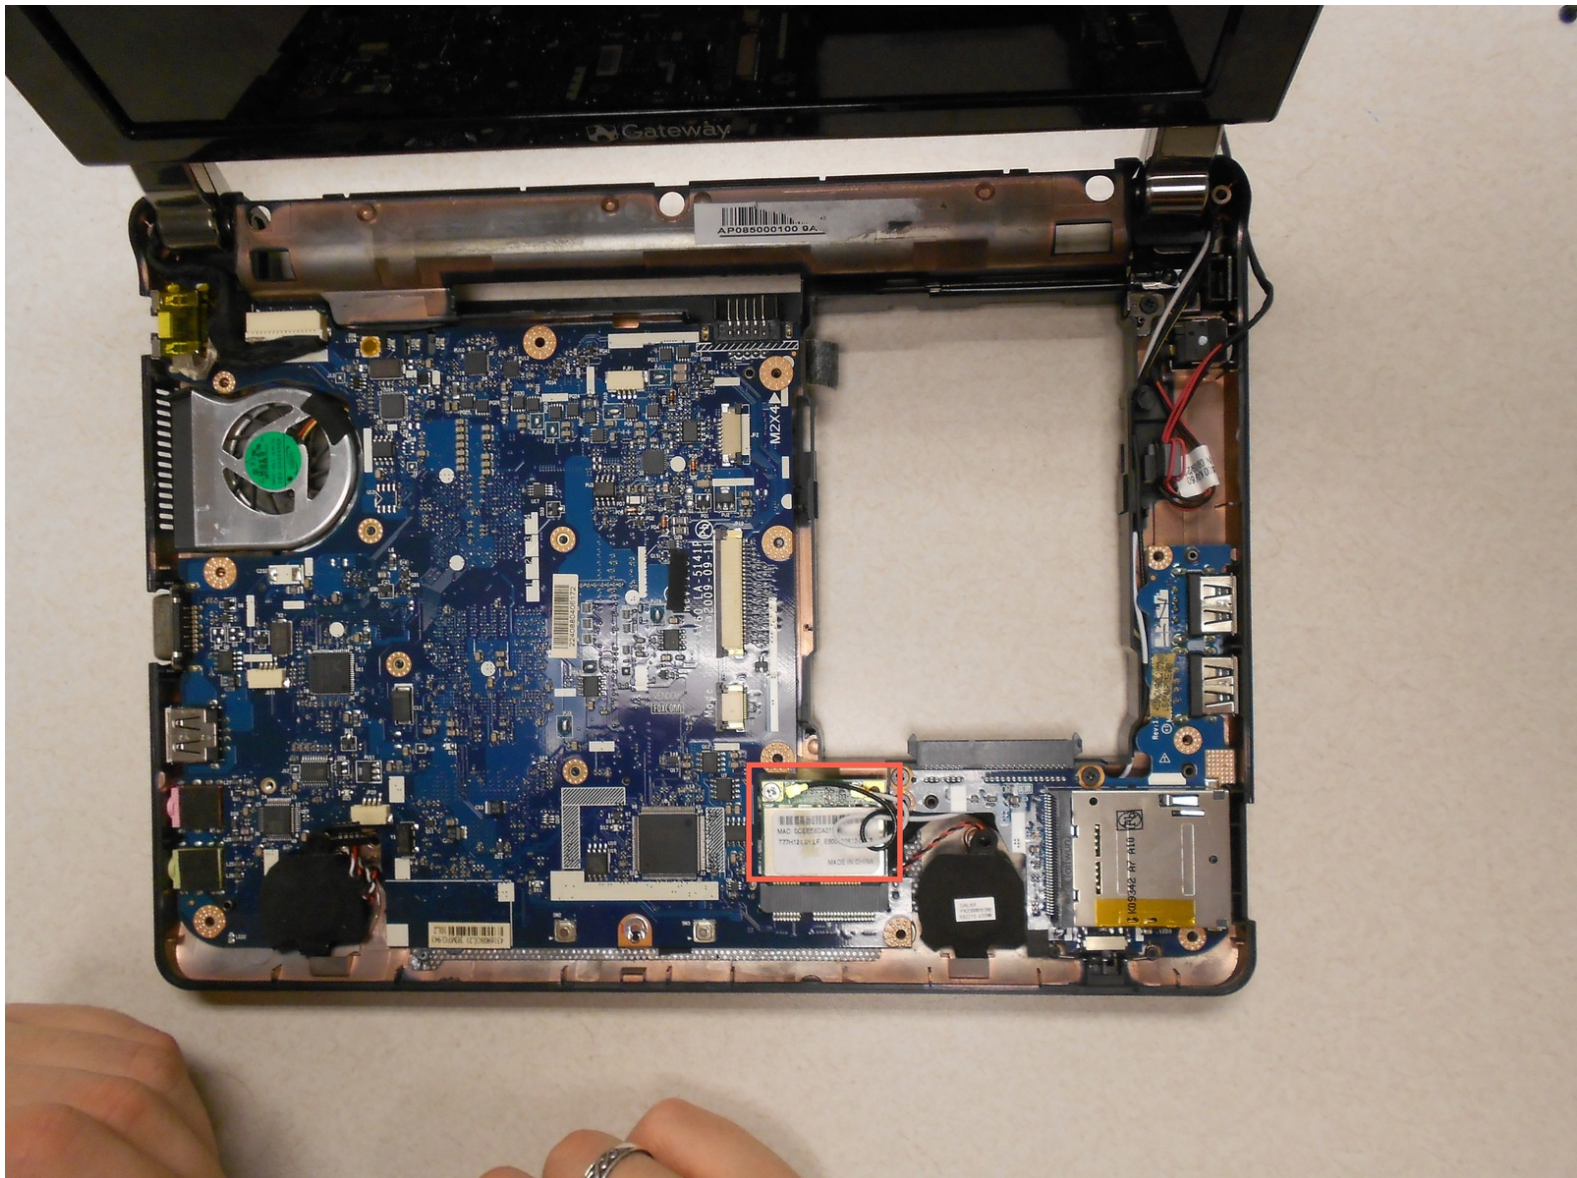

## INTRODUCTION

It is important to have a functioning Wi-Fi card because it allows you to connect to the internet when there are Wi-Fi Hotspots around.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Unlock the button in the top left on the back of the laptop (So the red is showing).


## Step 2



- The battery should be able to be removed easily now.



### Step 3 — Upper Cover

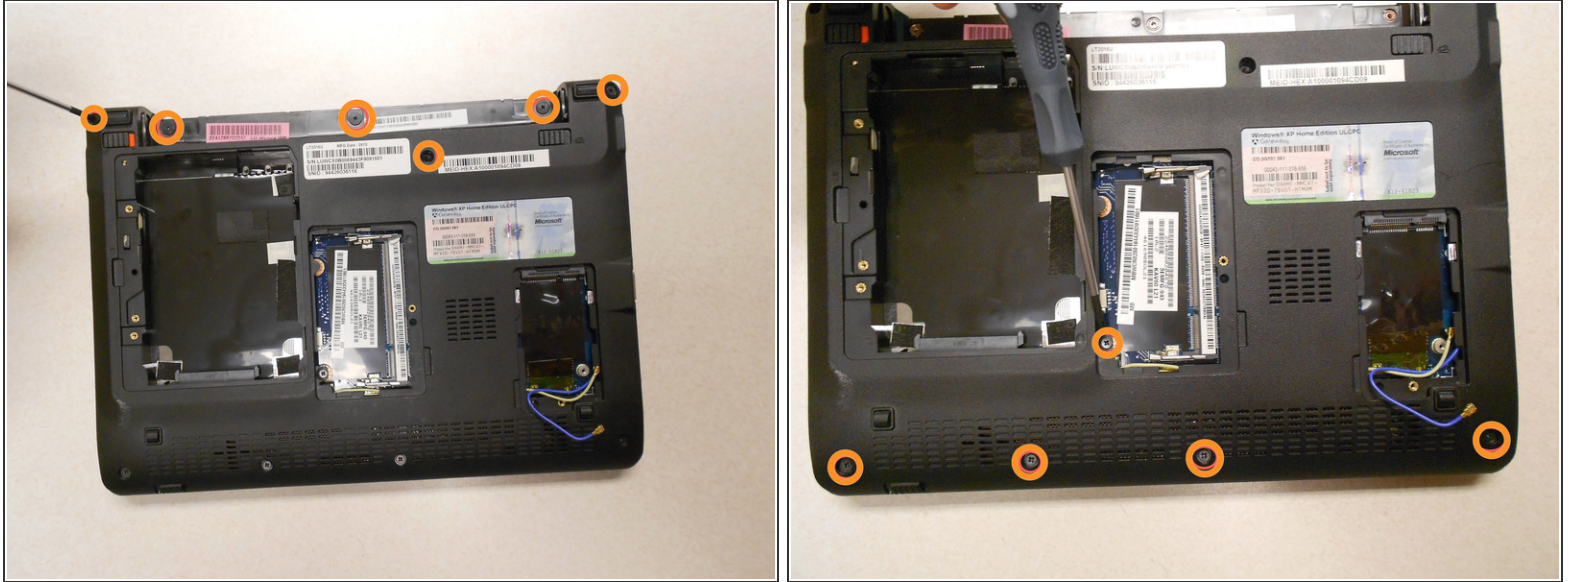

- Using the Phillips #0 screwdriver, remove six (6) 5mm screws, two (2) 17.5mm screws, and three (3) 2.5mm screws from the back cover, as marked here.

### Step 4





- Pry off the keyboard by placing your plastic opening tool on the center of the top row of keys, as shown in the photograph.
- If the plastic opening tool bends or slips, use something sturdier, such as the Phillips #0 screwdriver.
- Remove the keyboard.

## Step 5



- Remove the five (5) 5mm screws shown here using the Phillips #0 screwdriver.


## Step 6

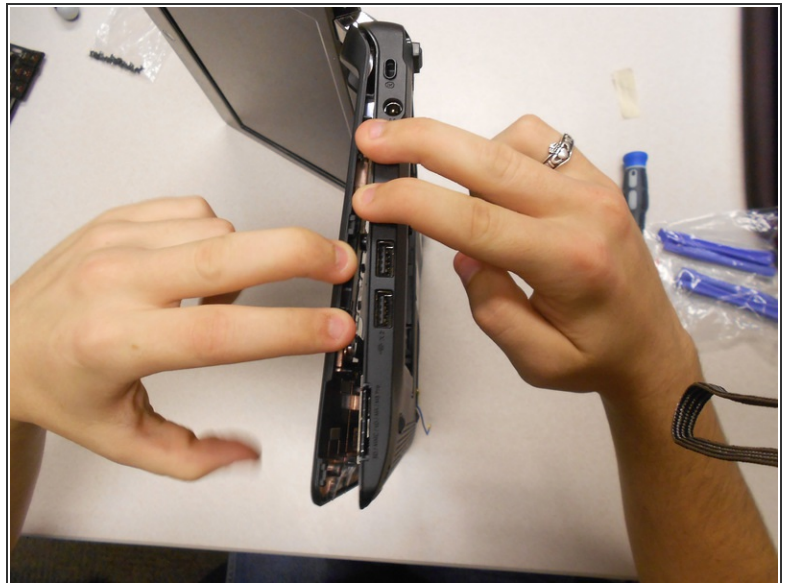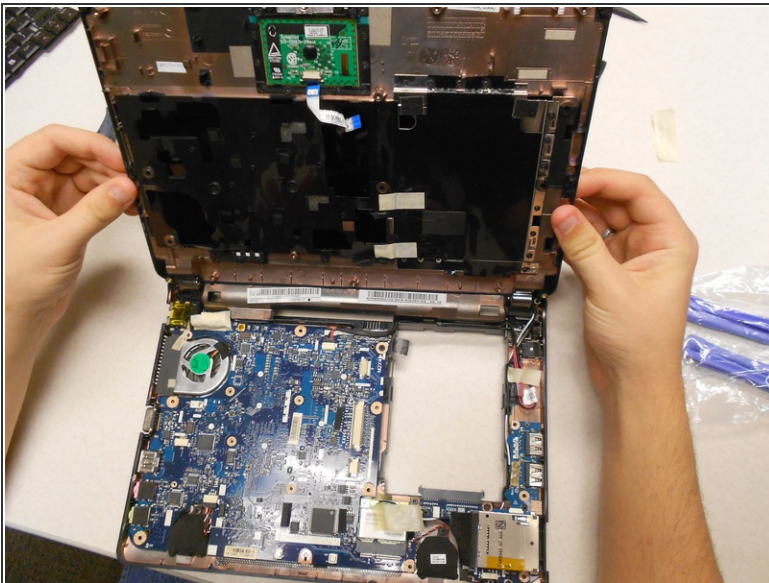

- Separate the upper cover from the back cover. It is possible to do this without a tool, but you may also use a plastic opening tool for added leverage.
- Be careful to keep even pressure all the way around the cover so that it is not bent beyond repair.





## Step 7 — WiFi Card

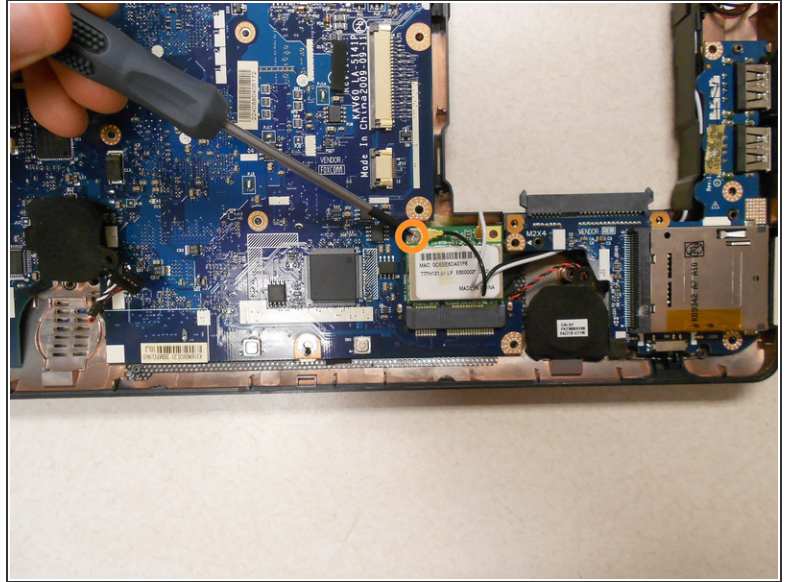

- The WiFi card is shown here.
- Remove the one (1) 5mm screw holding the card to the motherboard using a Phillips #0 screwdriver.

## Step 8

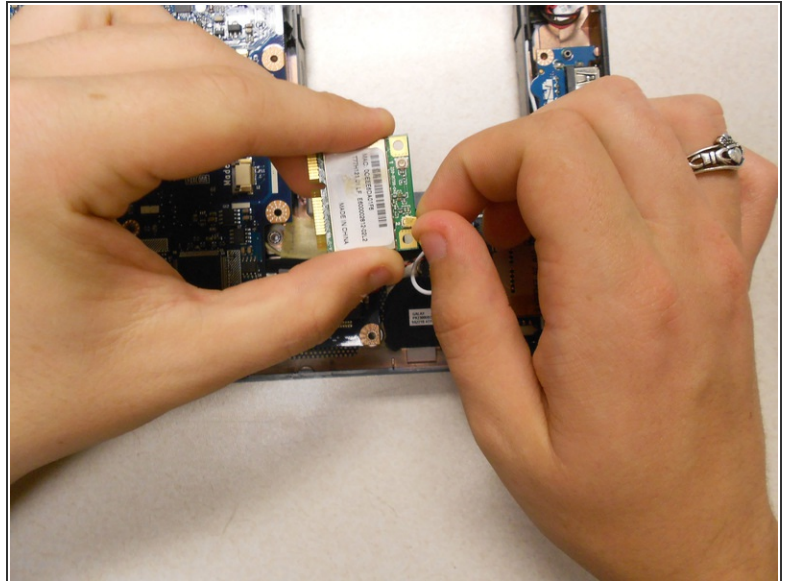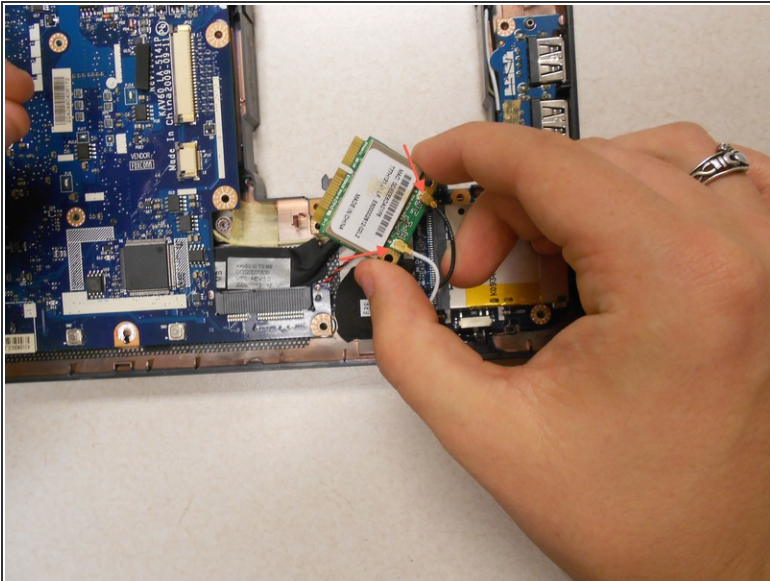

- Disconnect the wires on the Wi-Fi card.
- This can be done easily by applying pressure to the connections until they pop off of the card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 06:35:41 PM.